


18.3.19 Removing the shift drum locating unit

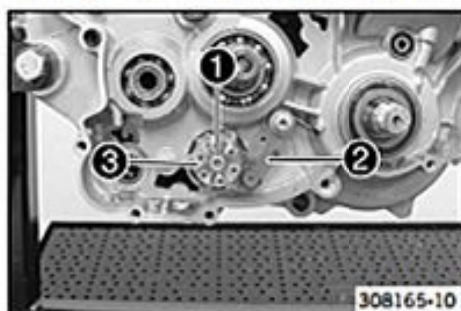


- Remove screw **1**.
- Push away locking lever **2** from shift drum locating unit **3** and remove the shift drum locating unit.
- Relieve tension from the locking lever.

18.3.20 Removing the locking lever




- Remove screw **1**.
- Take off locking lever **2** with the sleeve and spring.

18.3.21 Removing the rotor

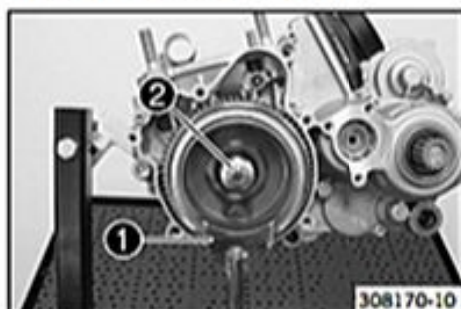


- Hold the rotor with special tool **1**.
Holding spanner, rotor (55129001000) (☞ p. 300)
- Remove nut **2** and the washer.

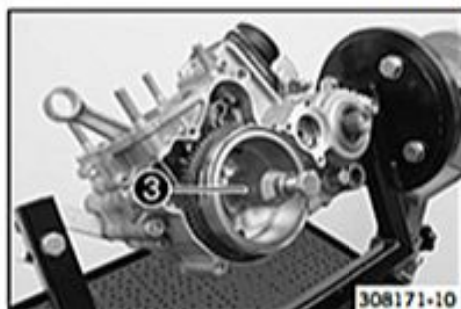

- Mount special tool **3**, apply counterpressure, and pull off the rotor by screwing in the screw.
Extractor (58012009000) (☞ p. 300)

18.3.22 Removing the reed valve housing

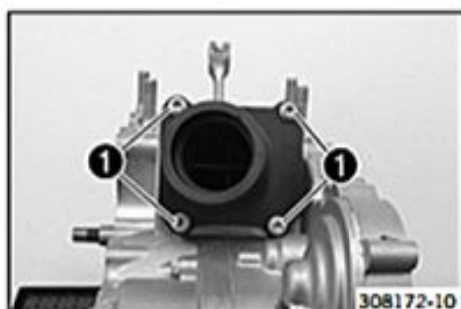

- Remove screws **1**.
- Take off the intake flange.