



Warning

Danger of scalding During motorcycle operation, the coolant gets very hot and is under pressure.


- Do not open the radiator, the radiator hoses or other cooling system components if the engine or the cooling system are at operating temperature.
- Allow the cooling system and the engine to cool down before you open the radiator, the radiator hoses or other components of the cooling system.
- In the event of scalding, rinse the area affected immediately with lukewarm water.



M01104-01



M01105-01

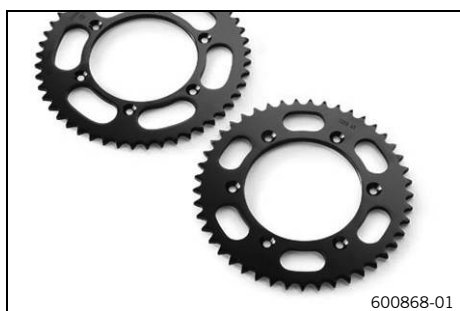

600868-01

- Change the radiator cap.

- Mount the air filter dust cover.

Air filter dust cover (79006920000)



Info

Observe the **KTM PowerParts** fitting instructions.

- Mount the air filter sand cover.

Air filter sand cover (79006922000)



Info

Observe the **KTM PowerParts** fitting instructions.

- Clean the chain.

Chain cleaner (📖 p. 170)

- Mount the steel sprocket.

- Grease the chain.

Universal oil spray (📖 p. 171)

- Clean the radiator fins.

- Straighten the bent radiator fins carefully.

Condition

Regular use in sand

- Change the piston every 10 operating hours.