



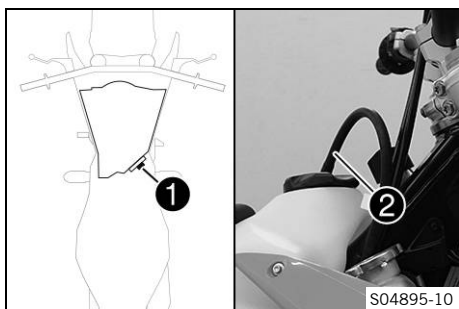

Main work

- Unplug connector ① of the fuel pump.
- Remove tube ② from the fuel tank breather.

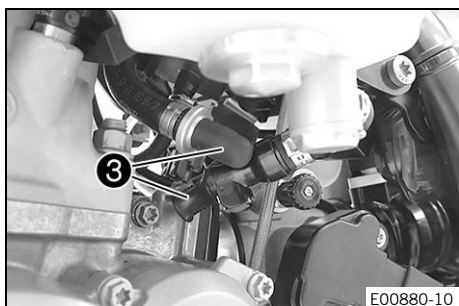

- Clean the quick release coupling thoroughly with compressed air.



Info

Under no circumstances should dirt enter into the fuel line. Dirt in the fuel line clogs the injection valve!

- Disconnect the quick release coupling.




Info

Remaining fuel may flow out of the fuel hose.

- Mount wash cap set ③.

Wash cap set (81212016100)

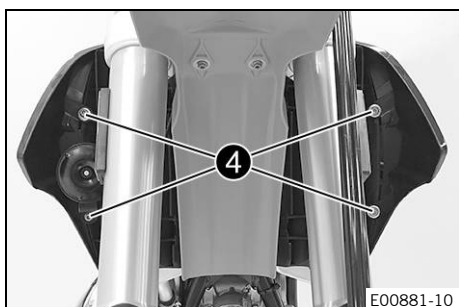


- Remove screws ④ with the collar bushings.

(All EXC models)

- Hang the horn and horn bracket to one side.



- Remove screw ⑤ with the rubber bushing.

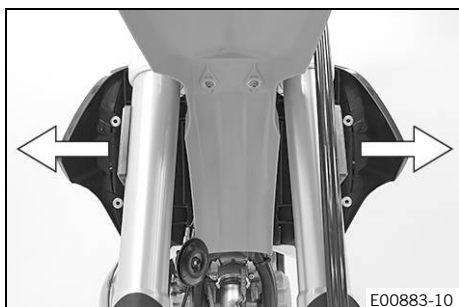

- Pull both spoilers off laterally from the radiator mount and lift off the fuel tank.